



# User Manual

## SATRAD-HE-675

### Table of Contents

Kit Contents .....	2
Overview .....	3
User Instructions.....	3



### Kit Contents

Description	Qty
SATRAD-HE-675 handset extender	1
Speaker	1
120Vac power supply	1
#6 Metal screws	4
#6 Flat washers	4



## Overview

The handset extender is used for areas where the operator needs to be significantly distant from the transceiver. The maximum distance this unit allows the operator to be from the transceiver is 206m or 675ft.

## User Instructions

1. Connect the handset to the handset port on the control unit.
2. Adjust the speaker volume to the desired level. For minimal volume then turn the knob fully counter-clockwise.
3. If the handset doesn't currently show any information, then depress the 'PWR', and hold until the "MSAT" shows on the screen.
4. Select the desired talk group and depress the "push to talk" button to initiate a transmission. For details on operation of the handset, refer to the MSAT User Guide.
  - a. On the handset press the button below "Group", then the up and down arrow until the proper group is highlighted then press the select key.
  - b. Talk group 00 is for private mode calling. If you know the DN number of the other system, enter in the 4 digits under this talk group to initiate a private mode call.
5. Press the PTT button and speak the message. Release the PTT when finished.
6. Adjust the volume control until the optimal volume is heard.

### NOTE:

The handset extender doesn't change any operational features of the SATRAD-G2. For more information on the SATRAD-G2 refer to the MAST user guide.



For any further questions contact technical support.

- a. Web: <http://helpdesk.networkinv.com>
- b. Toll Free: 1 866 708 1880
- c. Phone: 1 403 287 7818



**TOLL FREE 1-888-989-8199**

1455 N. Dutton Suite A, Santa Rosa, CA 95401  
FAX 707-546-8198 • [info@remotesatellite.com](mailto:info@remotesatellite.com)  
[www.remotesatellite.com](http://www.remotesatellite.com)