



User Manual

SATRAD-HE-5000

Table of Contents

Kit Contents	2
Overview	3
User Instructions.....	3
Trouble Shooting Tips	4



Kit Contents

Description	Qty
SATRAD-HE-5000 Controller	1
SATRAD-HE-5000 Booster	1
Cat5 data cable	1
Speaker	1
SATRAD-EP power supply	2
#6 Metal screws	6
#6 Flat washers	6



Overview

The handset extender is used for areas where the operator needs to be significantly distant from the transceiver. The maximum distance this unit allows the operator to be from the transceiver is 1524m or 5000ft.

User Instructions

1. Connect the handset to the handset port on the control unit.
2. Adjust the speaker volume to the desired level by turning the volume control knob.
3. To use the handset's speaker disconnect the speaker at the back of the controller, and turn the volume control knob fully counter clockwise.
4. Refer to the SATRAD-G2 user manual for details on how to use the handset.

NOTE:

Using the extender system doesn't change how the G2 operates.



Trouble Shooting Tips

For any further questions contact technical support.

- a. Web: <http://helpdesk.networkinv.com>
- b. Toll Free: 1 866 708 1880
- c. Phone: 1 403 287 7818